

[illegible]

Table of Contents

Component Names and Functions	06	Product Specifications & Packing List	09
Product Operation Instructions	07	After-Sales Service	10
Cleaning and Maintenance	08		
Electrical Schematic Diagram	08		
Fault Analysis and Troubleshooting	09		

06

Component Names and Functions

Function Interface Instructions

Please refer to the actual product in the package for product images!

Product Operation Instructions

Before using this product for the first time, please clean all parts that come into contact with your food.

Operation Guide

1

Insert the jug into the main unit, making sure the "Side Forward" slider locks the front panel.

2

Insert the Juicing Screen into the juicer base assembly.

3

Insert the upper assembly. Align the notch on the pressing parts of the upper assembly with the raised part of the juicing screen. Slightly rotate the juicing blade until it fits with the pressing plate and juicing screen.

4

Prepare ingredients.

5

Add ingredients and close the lid to start.

After operating, place fruits and vegetables into the hopper, close the hopper lid, and turn on the machine to make 120% juice.

4

5

6

7

8

9

10

11

12

13

14

15

16

17

18

19

20

21

22

23

24

25

26

27

28

29

30

31

32

33

34

35

36

37

38

39

40

41

42

43

44

45

46

47

48

49

50

51

52

53

54

55

56

57

58

59

60

61

62

63

64

65

66

67

68

69

70

71

72

73

74

75

76

77

78

79

80

81

82

83

84

85

86

87

88

89

90

91

92

93

94

95

96

97

98

99

100

Cleaning and Maintenance

1. After use, disconnect the power supply and remove detachable components separately.
2. If the main unit has an air-ung out-dump-chips, Clean other detachable accessories (Luxe Bowl Assembly, juicing screen, juicer assembly, juicer assembly, pulser, etc.) with clean water. Dry all components thoroughly before storage.

Note: When cleaning the Juice Bowl Assembly, open the pulp outlet for easier cleaning.

3. Do not clean the product with steel wool, abrasive cleaners, or corrosive liquids (e.g., bleach, acetone).
4. If the product is not used for an extended period, keep it clean and dry, and store it in a ventilated place away from direct sunlight.
5. Disconnect and Cleaning Steps for Food Contact Components:

1

Remove the juicing assembly from the main unit.

2

Rotate the juicer counterclockwise and remove it.

3

Take out the sugar assembly and juicing screen separately.

4

Push open the pulp outlet and clean it.

For thorough cleaning of the juice collection trap, open the pulp outlet.

Electrical Schematic Diagram

```

graph LR
    AC[220-240V/50-60Hz AC] --- PowerPCB[Power PCB]
    PowerPCB --- DisplayPCB[Display PCB]
    PowerPCB --- InterlockSwitch[Interlock switch]
    InterlockSwitch --- RotarySwitch[Rotary switch]
    RotarySwitch --- Motor[Motor]
  
```

[illegible]

After-Sales Service

1. Warranty Registrations
 - The product is covered by a 2-year warranty sold nationwide.
2. Warranty Period Definition
 - The start date is based on a valid purchase voucher/invoice, online receipt, etc.
 - If no voucher exists, the start date is 3 months after the product batchcode date.
3. Exclusions from Free Warranty Service

The following cases are not covered under the free warranty:

- Damage caused by force majeure events.
- Damage caused by human factors (Improper moving, use, maintenance, or storage).
- Damage caused by modification or repair at non-authorized service points (including self-diagnosis or repair).
- Products used for non-household purposes (business, commercial, or collective use).
- Failure to provide valid purchase voucher or the warranty has expired.

After-Sales Service Contact Information

- Singapore – commercial: after-sales-my@yoyung.com
- Malaysia – commercial: after-sales-my@yoyung.com
- Thailand – commercial: after-sales-th@yoyung.com

[illegible][illegible]

- 7) ចាប់ផ្តើមដំបូង... លេខ ១២ ដំបូងបំផុត, ១៣, ១៤, ១៥, ១៦, ១៧, ១៨, ១៩, ២០, ២១, ២២, ២៣, ២៤, ២៥, ២៦, ២៧, ២៨, ២៩, ៣០, ៣១, ៣២, ៣៣, ៣៤, ៣៥, ៣៦, ៣៧, ៣៨, ៣៩, ៤០, ៤១, ៤២, ៤៣, ៤៤, ៤៥, ៤៦, ៤៧, ៤៨, ៤៩, ៥០, ៥១, ៥២, ៥៣, ៥៤, ៥៥, ៥៦, ៥៧, ៥៨, ៥៩, ៦០, ៦១, ៦២, ៦៣, ៦៤, ៦៥, ៦៦, ៦៧, ៦៨, ៦៩, ៧០, ៧១, ៧២, ៧៣, ៧៤, ៧៥, ៧៦, ៧៧, ៧៨, ៧៩, ៨០, ៨១, ៨២, ៨៣, ៨៤, ៨៥, ៨៦, ៨៧, ៨៨, ៨៩, ៩០, ៩១, ៩២, ៩៣, ៩៤, ៩៥, ៩៦, ៩៧, ៩៨, ៩៩, ១០០, ១០១, ១០២, ១០៣, ១០៤, ១០៥, ១០៦, ១០៧, ១០៨, ១០៩, ១១០, ១១១, ១១២, ១១៣, ១១៤, ១១៥, ១១៦, ១១៧, ១១៨, ១១៩, ១២០, ១២១, ១២២, ១២៣, ១២៤, ១២៥, ១២៦, ១២៧, ១២៨, ១២៩, ១៣០, ១៣១, ១៣២, ១៣៣, ១៣៤, ១៣៥, ១៣៦, ១៣៧, ១៣៨, ១៣៩, ១៤០, ១៤១, ១៤២, ១៤៣, ១៤៤, ១៤៥, ១៤៦, ១៤៧, ១៤៨, ១៤៩, ១៥០, ១៥១, ១៥២, ១៥៣, ១៥៤, ១៥៥, ១៥៦, ១៥៧, ១៥៨, ១៥៩, ១៦០, ១៦១, ១៦២, ១៦៣, ១៦៤, ១៦៥, ១៦៦, ១៦៧, ១៦៨, ១៦៩, ១៧០, ១៧១, ១៧២, ១៧៣, ១៧៤, ១៧៥, ១៧៦, ១៧៧, ១៧៨, ១៧៩, ១៨០, ១៨១, ១៨២, ១៨៣, ១៨៤, ១៨៥, ១៨៦, ១៨៧, ១៨៨, ១៨៩, ១៩០, ១៩១, ១៩២, ១៩៣, ១៩៤, ១៩៥, ១៩៦, ១៩៧, ១៩៨, ១៩៩, ២០០, ២០១, ២០២, ២០៣, ២០៤, ២០៥, ២០៦, ២០៧, ២០៨, ២០៩, ២១០, ២១១, ២១២, ២១៣, ២១៤, ២១៥, ២១៦, ២១៧, ២១៨, ២១៩, ២២០, ២២១, ២២២, ២២៣, ២២៤, ២២៥, ២២៦, ២២៧, ២២៨, ២២៩, ២៣០, ២៣១, ២៣២, ២៣៣, ២៣៤, ២៣៥, ២៣៦, ២៣៧, ២៣៨, ២៣៩, ២៤០, ២៤១, ២៤២, ២៤៣, ២៤៤, ២៤៥, ២៤៦, ២៤៧, ២៤៨, ២៤៩, ២៥០, ២៥១, ២៥២, ២៥៣, ២៥៤, ២៥៥, ២៥៦, ២៥៧, ២៥៨, ២៥៩, ២៦០, ២៦១, ២៦២, ២៦៣, ២៦៤, ២៦៥, ២៦៦, ២៦៧, ២៦៨, ២៦៩, ២៧០, ២៧១, ២៧២, ២៧៣, ២៧៤, ២៧៥, ២៧៦, ២៧៧, ២៧៨, ២៧៩, ២៨០, ២៨១, ២៨២, ២៨៣, ២៨៤, ២៨៥, ២៨៦, ២៨៧, ២៨៨, ២៨៩, ២៩០, ២៩១, ២៩២, ២៩៣, ២៩៤, ២៩៥, ២៩៦, ២៩៧, ២៩៨, ២៩៩, ៣០០, ៣០១, ៣០២, ៣០៣, ៣០៤, ៣០៥, ៣០៦, ៣០៧, ៣០៨, ៣០៩, ៣១០, ៣១១, ៣១២, ៣១៣, ៣១៤, ៣១៥, ៣១៦, ៣១៧, ៣១៨, ៣១៩, ៣២០, ៣២១, ៣២២, ៣២៣, ៣២៤, ៣២៥, ៣២៦, ៣២៧, ៣២៨, ៣២៩, ៣៣០, ៣៣១, ៣៣២, ៣៣៣, ៣៣៤, ៣៣៥, ៣៣៦, ៣៣៧, ៣៣៨, ៣៣៩, ៣៤០, ៣៤១, ៣៤២, ៣៤៣, ៣៤៤, ៣៤៥, ៣៤៦, ៣៤៧, ៣៤៨, ៣៤៩, ៣៥០, ៣៥១, ៣៥២, ៣៥៣, ៣៥៤, ៣៥៥, ៣៥៦, ៣៥៧, ៣៥៨, ៣៥៩, ៣៦០, ៣៦១, ៣៦២, ៣៦៣, ៣៦៤, ៣៦៥, ៣៦៦, ៣៦៧, ៣៦៨, ៣៦៩, ៣៧០, ៣៧១, ៣៧២, ៣៧៣, ៣៧៤, ៣៧៥, ៣៧៦, ៣៧៧, ៣៧៨, ៣៧៩, ៣៨០, ៣៨១, ៣៨២, ៣៨៣, ៣៨៤, ៣៨៥, ៣៨៦, ៣៨៧, ៣៨៨, ៣៨៩, ៣៩០, ៣៩១, ៣៩២, ៣៩៣, ៣៩៤, ៣៩៥, ៣៩៦, ៣៩៧, ៣៩៨, ៣៩៩, ៤០០, ៤០១, ៤០២, ៤០៣, ៤០៤, ៤០៥, ៤០៦, ៤០៧, ៤០៨, ៤០៩, ៤១០, ៤១១, ៤១២, ៤១៣, ៤១៤, ៤១៥, ៤១៦, ៤១៧, ៤១៨, ៤១៩, ៤២០, ៤២១, ៤២២, ៤២៣, ៤២៤, ៤២៥, ៤២៦, ៤២៧, ៤២៨, ៤២៩, ៤៣០, ៤៣១, ៤៣២, ៤៣៣, ៤៣៤, ៤៣៥, ៤៣៦, ៤៣៧, ៤៣៨, ៤៣៩, ៤៤០, ៤៤១, ៤៤២, ៤៤៣, ៤៤៤, ៤៤៥, ៤៤៦, ៤៤៧, ៤៤៨, ៤៤៩, ៤៥០, ៤៥១, ៤៥២, ៤៥៣, ៤៥៤, ៤៥៥, ៤៥៦, ៤៥៧, ៤៥៨, ៤៥៩, ៤៦០, ៤៦១, ៤៦២, ៤៦៣, ៤៦៤, ៤៦៥, ៤៦៦, ៤៦៧, ៤៦៨, ៤៦៩, ៤៧០, ៤៧១, ៤៧២, ៤៧៣, ៤៧៤, ៤៧៥, ៤៧៦, ៤៧៧, ៤៧៨, ៤៧៩, ៤៨០, ៤៨១, ៤៨២, ៤៨៣, ៤៨៤, ៤៨៥, ៤៨៦, ៤៨៧, ៤៨៨, ៤៨៩, ៤៩០, ៤៩១, ៤៩២, ៤៩៣, ៤៩៤, ៤៩៥, ៤៩៦, ៤៩៧, ៤៩៨, ៤៩៩, ៥០០, ៥០១, ៥០២, ៥០៣, ៥០៤, ៥០៥, ៥០៦, ៥០៧, ៥០៨, ៥០៩, ៥១០, ៥១១, ៥១២, ៥១៣, ៥១៤, ៥១៥, ៥១៦, ៥១៧, ៥១៨, ៥១៩, ៥២០, ៥២១, ៥២២, ៥២៣, ៥២៤, ៥២៥, ៥២៦, ៥២៧, ៥២៨, ៥២៩, ៥៣០, ៥៣១, ៥៣២, ៥៣៣, ៥៣៤, ៥៣៥, ៥៣៦, ៥៣៧, ៥៣៨, ៥៣៩, ៥

အသုံးပြုမှု

ဤစက်သည် အောက်ဖော်ပြပါအတိုင်း အသုံးပြုရန် ရည်ရွယ်ချက်ရှိပြီး အသုံးပြုသူများ၏ အဆင်ပြေစွာ အသုံးပြုနိုင်ရန် ရည်ရွယ်ချက်ရှိပါသည်။ ဤစက်ကို အောက်ဖော်ပြပါအတိုင်း အသုံးပြုခြင်းဖြင့် အသုံးပြုသူများ၏ အဆင်ပြေစွာ အသုံးပြုနိုင်ရန် ရည်ရွယ်ချက်ရှိပါသည်။

ဤစက်ကို အောက်ဖော်ပြပါအတိုင်း အသုံးပြုခြင်းဖြင့် အသုံးပြုသူများ၏ အဆင်ပြေစွာ အသုံးပြုနိုင်ရန် ရည်ရွယ်ချက်ရှိပါသည်။

ဤစက်ကို အောက်ဖော်ပြပါအတိုင်း အသုံးပြုခြင်းဖြင့် အသုံးပြုသူများ၏ အဆင်ပြေစွာ အသုံးပြုနိုင်ရန် ရည်ရွယ်ချက်ရှိပါသည်။


สารบัญ	
.....	15
.....	17
.....	18
.....	18
.....	19
.....	19
.....	20

Diagram illustrating the components of the 3-in-1 coffee machine:

- 1. ถังใส่น้ำร้อน (Hot water tank)
- 2. ถังใส่น้ำร้อนและกาแฟ (Hot water and coffee tank)
- 3. ถังใส่น้ำร้อน (Hot water tank)
- 4. ถังใส่น้ำร้อน (Hot water tank)
- 5. ถังใส่น้ำร้อน (Hot water tank)
- 6. ถังใส่น้ำร้อน (Hot water tank)
- 7. ถังใส่น้ำร้อน (Hot water tank)
- 8. ถังใส่น้ำร้อน (Hot water tank)

The control panel includes a power button (ON/OFF) and a pressure gauge (PSI).

[illegible][illegible][illegible][illegible]

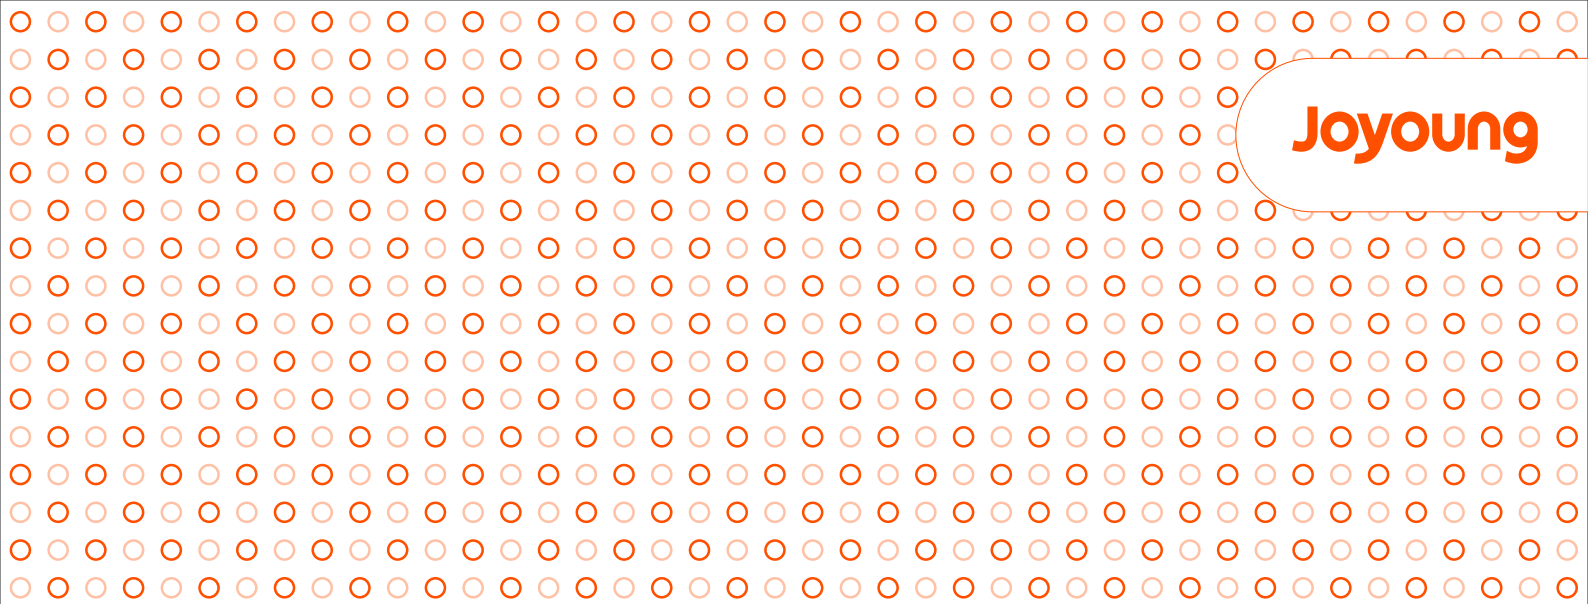

Joyoung

Slow Juicer SJ-Z585-MS01 and SJ-Z585-TH01 User Manual

คู่มือการใช้งาน เครื่องสกัดน้ำผลไม้แบบรอบตัว รุ่น SJ-Z585-MS01 และ SJ-Z585-TH01

Before use, please read the user manual carefully and keep it properly for future reference

ก่อนใช้งาน โปรดอ่านคู่มือการใช้งานอย่างละเอียด และเก็บรักษาคู่มือการใช้งานไว้ให้เรียบร้อยเพื่อใช้อ้างอิงในอนาคต

Safety Precautions

 **WARNING** Indicates safety matters that may result in death or serious injury.

 **CAUTION** Indicates safety matters that may result in minor injury or property damage.

 **WARNING**

1. Always operate the appliance with the lid in the correct position as specified in this manual. Never insert hands or utensils into the feeding chute when the appliance is placed on the base unit. Use the provided pusher to guide ingredients into the chute if needed.
2. Misuse of the appliance (e.g., using non-original components, processing extremely hard ingredients like sugarcane/ice cubes, operating with damaged parts) may cause fire, electric shock, or personal injury. Follow all safety precautions and usage instructions strictly.
3. Always disconnect the appliance from the power supply if left unattended, and before assembling, disassembling or cleaning.
4. Risk of cuts! Exercise extreme caution when handling sharp components (such as the auger assembly), emptying pulp container and cleaning.
5. Avoid spilling liquid on the power connector to prevent electric shock or short circuit.
6. Do not rinse, immerse, or spray the main unit in water or other liquids, as this may cause component damage or electric leakage.
7. Do not insert hands, chopsticks, or other sharp objects into the feeding inlet or juice outlet to prevent injury or product damage.
8. Do not connect the product to a power supply via a lamp holder with an outlet.
9. Do not use the product near flammable or explosive materials or in similar environments.
10. Do not disassemble, modify the internal wiring, components, or protective devices of the product without authorization.

CAUTION

1. This appliance is intended for household use and similar applications including:
 - staff kitchen areas in shops, offices and other working environments;
 - farm houses;
 - by clients in hotels, motels and other residential type environments;
 - bed and breakfast type environments.
2. To ensure food safety, thoroughly clean all food-contact surfaces (juice filter, auger, juice/pulp containers) after each use. Rinse with clean water; do NOT use abrasive cleaners or steel wool. Ensure all parts are completely dry before reassembly or storage.
3. Before use, ensure the voltage matches the product specifications (220-240V/50-60Hz) to avoid safety hazards and product damage.
4. This product is not intended for use by persons with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge (including children), unless they are supervised or instructed by a person responsible for their safety. Children should be supervised to ensure they do not play with the product.
5. This product is for household use only. Do not use it for any other purposes.
6. This product is only suitable for use at altitudes below 2,000 meters.
7. Keep the product at least 30cm away from fire sources to prevent product damage or fire hazards.
8. Use the product only with matching components, including those included with the product and separate accessories sold by our company. Non-matching components may affect product performance or cause accidents.
9. If the power cord is damaged, to avoid danger, it must be replaced by the manufacturer, its service agent, or qualified professionals.
10. During use, fully insert the power plug into the socket to ensure good contact. Incomplete insertion may cause electric shock or overheating, leading to fire.
11. Do not replace fuses in household appliances or power supplies with ordinary conductors or fuses exceeding the specified current rating.
12. Before replacing components or touching moving parts, turn off the switch and disconnect the power supply.
13. Before disassembling, assembling, adjusting, or cleaning any parts of the product,

- turn off the switch and disconnect the power supply to prevent electric leakage or accidental startup.
14. Before, during, or after use, if damage or obvious cracks are found in the main unit, Juice Bowl Assembly, juicing screen, auger assembly, or hopper assembly, stop using the product immediately to avoid injury. After processing, turn off the switch, disconnect the power supply, and wait for the motor and auger to stop completely before removing detachable components and cleaning the product in a timely manner. Clean food-contact components with clean water. Handle with care when disassembling and cleaning detachable parts to avoid injury (protective gloves are recommended).
 15. Do not plug or unplug the power cord with wet hands to prevent electric shock. Do not let the power cord come into contact with sharp edges or corners to avoid damage and leakage. When unplugging, hold the plug firmly—do not pull the power cord to prevent damage.
 16. If the product emits abnormal noise, odor, excessive heat, or malfunctions, stop using it immediately, turn off the switch, and disconnect the power supply.
 17. The operating speed of this product is preset to the optimal level and does not require adjustment.
 18. Turn off the switch and disconnect the power supply when the product is not in use to prevent short circuits.
 19. The product is recommended to run continuously for 10 minutes, then rest. To continue use, allow a 15-minute cooling period before restarting.
 20. Do not use the product for any purposes not specified in this manual.
 21. Place the product on a stable, level surface during use. Do not operate it on an inclined or unstable surface, or on flammable materials such as carpets, towels, plastics, or paper. Keep it away from the edge of the surface to prevent tipping or accidents.
 22. Before use, inspect the main unit, Juice Bowl Assembly, juicing screen, auger assembly, hopper assembly, etc., for damage. If damage is found, stop use and contact our customer service department immediately. Do not disassemble or repair the product without authorization, as this may affect performance or cause accidents.

23. When moving the product, hold the bottom with both hands to prevent the main unit from falling, which may cause injury or product damage.
24. Before connecting the power supply, ensure the switch is in the OFF position and all detachable components are properly installed to avoid power failure or injury.
25. Do not move the product or touch moving parts such as the auger assembly and motor while it is powered on to prevent injury or product damage.
26. During operation, do not place eyes close to the feeding inlet to prevent injury.
27. Staining of components after processing certain ingredients is normal and does not affect product use.
28. Do not clean or sterilize any parts of the product in a dishwasher, microwave oven, disinfection cabinet, or hot water exceeding 60°C. Do not heat components using other equipment to avoid deformation or damage.
29. Do not process ingredients with a temperature exceeding 60°C to prevent component damage or scalding.
30. Do not disassemble, squeeze, damage, or short-circuit the product arbitrarily. Do not immerse the product in water or fire to avoid fire risks.
31. Do not place the product in high-temperature or strong-magnetic environments to prevent abnormal operation or fire hazards.
32. When discarding the product or its packaging, hand it over to qualified recycling departments. Cut the power cord before disposal.
33. This appliance is not intended for use by children. Keep the appliance and its supply cord out of reach of children.
34. Ingredient Tips:
 - 1) Fruits high in protein/fat (e.g., durian, jackfruit, avocado) are unsuitable for juicing alone; pair them with watery fruits like pears.
 - 2) Remove pits, hard seeds, or thick skins from peaches, plums, apricots, mangoes, persimmons, ambarellas etc., before processing to avoid damaging the product.
 - 3) Due to high acidity, limit lemon juice to 20g (≈3 thin slices) per batch and mix with other fruits/vegetables.
 - 4) Fibrous/hard ingredients (e.g., carrots, celery, ginger) should be chopped for juicing. Clean the pulp outlet manually during use to maintain smooth operation. Wash juicing components after every 1kg of fibrous ingredients.

- 5) Leafy/stemmed ingredients (e.g., celery, kale) should be cut into 5–6 cm segments. Fibers may wrap around the auger assembly; manually clear the pulp outlet for better efficiency.
- 6) Freshly squeezed apple juice may oxidize and change color, which is normal. Adding a few drops of lemon juice can slow down the oxidation process.
- 7) Ingredients with high pulp content and soft texture (e.g., tomatoes, kiwis) yield less juice. It is recommended to juice them together with harder, juicier ingredients (e.g., pears), processing the softer ones first and the harder ones afterward.
- 9) Due to seasonal and regional variations in ingredients, juice yield and taste may slightly differ.
- 10) Frozen berries and fruits can be used to make ice cream, such as bananas, mangoes, dragon fruit, blueberries, and strawberries. Before processing, cut the ingredients into ~3x3 cm cubes and freeze for at least 6 hours. Feed small amounts at a time (recommended: 6–8 pieces per batch). Overloading or oversized pieces may cause the motor to stall and shut down.
- 11) Do not use this product to juice sugarcane, ice cubes, or other extremely hard ingredients!
- 12) Whole round fruits (e.g., oranges, apples) may occasionally not feed smoothly due to their shape. If clogging occurs, use the pusher to assist, or cut into pieces before use.

Preface

Dear Customer,

Thank you for choosing Joyoung Juicer (Slow Juicer). This instruction manual applies to model SJ-Z585-MS01 and SJ-Z585-TH01. All content in this manual is provided for reference only during product use and maintenance. For any unresolved matters, please contact our customer service department.

We hope Joyoung products bring warmth, convenience, and health to your life.


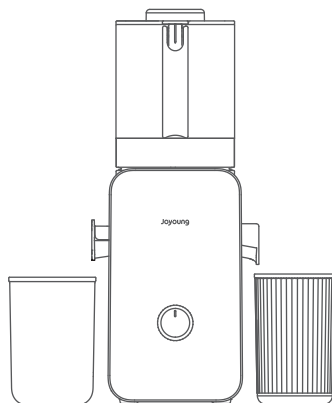


Table of Contents


Component Names and Functions -----	06	Product Specifications & Packing List -----	09
Product Operation Instructions -----	07	After-Sales Service -----	10
Cleaning and Maintenance -----	08		
Electrical Schematic Diagram -----	08		
Fault Analysis and Troubleshooting -----	09		

Component Names and Functions

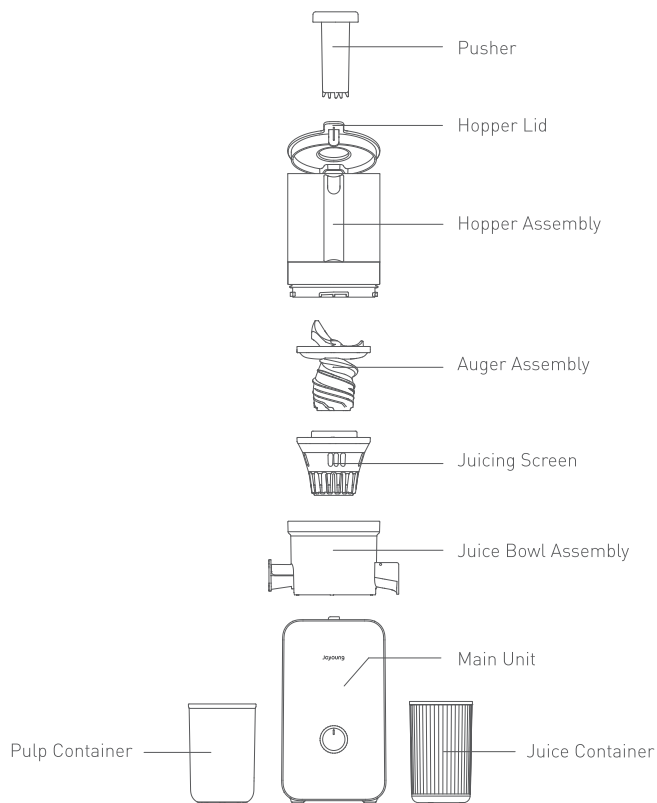

Note: Please refer to the actual product in the package for product images!

Function Interface Instructions

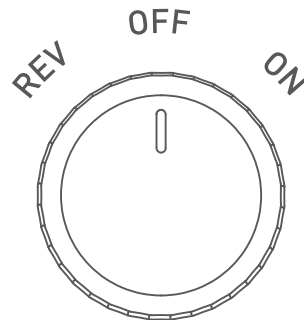

ON: Turn the knob to the ON position—the machine operates normally for juicing, and the light ring glows white steadily.

OFF: When the switch is in the middle position (OFF), the product stops working, and the light ring blinks white for five minutes before turning off.

REV: Press and hold the knob at the REV position—the machine runs in reverse, and the light ring glows orange steadily. This function is used to resolve ingredient jamming or assist in disassembling/assembling the juicing assembly.


Notes:

- Do not run the machine idle without adding ingredients.
- Close the pulp outlet of the Juice Bowl Assembly before juicing. If not closed properly, a small amount of liquid may leak from the pulp outlet.
- If ingredients get stuck during juicing, use the matching pusher to gently press and rotate the ingredients to assist cutting; alternatively, run the machine in reverse for about 5–10 seconds, then switch back to the Juice position to continue.
- A small amount of ingredients may result in minimal or no residue—this is normal and does not affect use.
- Do not close the juice outlet cover for an extended period during juicing, as juice may flow back into the hopper.
- For mixed juicing, add soft ingredients (e.g., oranges) first, then hard ingredients (e.g., carrots) for better juice texture.
- When juicing hard ingredients (e.g., carrots), cut them into pieces before feeding to avoid jamming.
- After juicing, close the juice outlet cover before removing the juice cup to prevent residual juice from dripping.


Product Operation Instructions

Before using this product for the first time, please clean all parts that come into contact with food.


Operation Guide

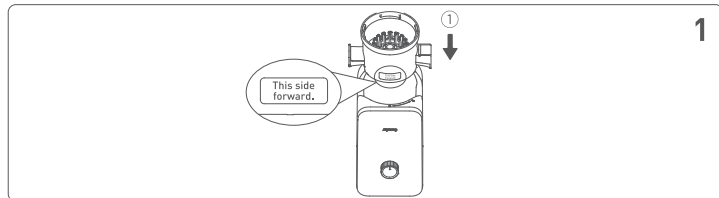


Install the juice bowl assembly onto the main unit, making sure the "This Side Forward" sticker faces the front panel.

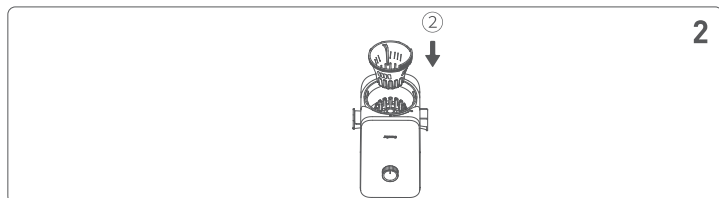


Install the Juicing Screen into the juice bowl assembly.

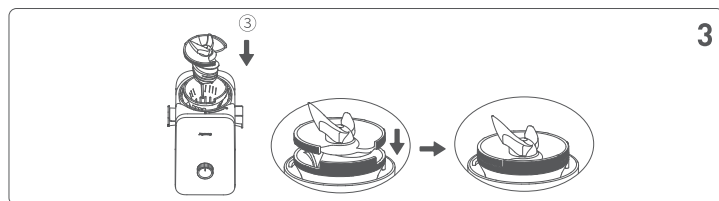

Install the auger assembly: Align the notch on the pressing plate of the auger assembly with the raised part of the juicing screen. Slightly rotate the top cutting blade until it is flush with the pressing plate and juicing screen.

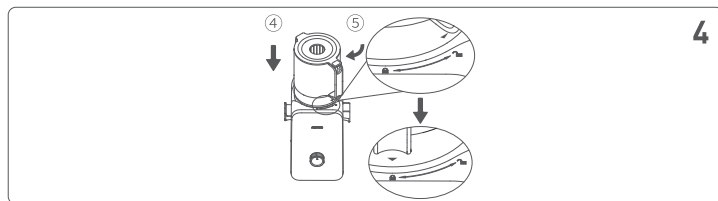

Install the hopper: Align the hopper alignment mark ▼ with the unlock position ☞ on the main unit, place it into the juice bowl assembly, then rotate clockwise until the hopper alignment mark ▼ is fully aligned ☞.

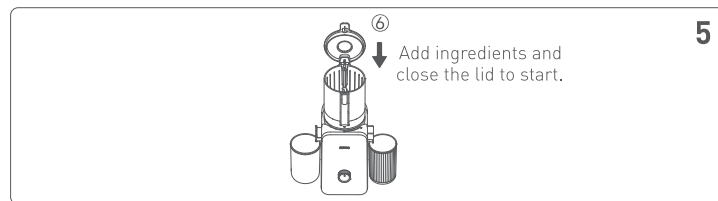

After cleaning, place fruits and vegetables into the hopper, close the hopper lid, and turn on the machine to make fresh juice.

6. This product supports two feeding methods:

Method 1: Open the hopper lid. Cut large or fibrous ingredients (such as celery) into sections of 5–6 cm or shorter, place them into the hopper, close the hopper lid, then start juicing.

Method 2: Long or small ingredients can be fed directly through the small opening on the flip lid.


Note: For safety, if the hopper lid is opened during operation, the product will stop working. It will resume operation once the hopper lid is closed again.

Cleaning and Maintenance

1. After use, disconnect the power supply and remove detachable components promptly.
2. Wipe the main unit with a wrung-out damp cloth. Clean other detachable accessories [Juice Bowl Assembly, juicing screen, auger assembly, hopper assembly, pusher, etc.] with clean water. Dry all components thoroughly before storage.


Note: When cleaning the Juice Bowl Assembly, open the pulp putlet for easier cleaning.

3. Do not clean the product with steel wool, abrasive cleaners, or corrosive liquids (e.g., gasoline, acetone).
4. If the product is not used for an extended period, keep it clean and dry, and store it in a dry, ventilated place away from direct sunlight."
5. Disassembly and Cleaning Steps for Food-Contact Components:




1

Remove the juicing assembly from the main unit.

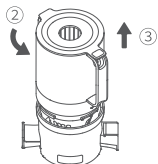

2

Unscrew the hopper counterclockwise and remove it.

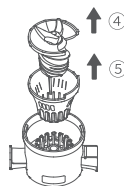

3


Take out the auger assembly and juicing screen separately.



4

For thorough cleaning of the juice collection tray, open the pulp putlet.

Electrical Schematic Diagram

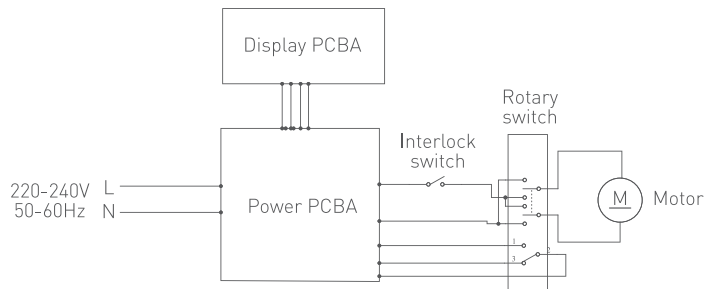

Fault Analysis and Troubleshooting

Fault phenomenon	Cause Analysis	Troubleshooting Solutions
The product does not operate after being powered on	The power plug is not properly inserted	Insert the power plug securely
	The hopper assembly is not installed correctly	Install the hopper assembly correctly and close the hopper lid
Excessive pulp in the juice	The juicing screen is damaged	Please send the product to the nearest Joyoung service center for inspection
Abnormal vibration or loud noise	The juicing screen is damaged	Please send the product to the nearest Joyoung service center for inspection
	The motor is damaged	Please send the product to the nearest Joyoung service center for inspection
Juice or pulp leakage on the main unit after juicing	The pulp outlet of the juice bowl was not closed before juicing	Close the pulp outlet before juicing
The hopper assembly cannot be installed properly	The auger assembly is not installed correctly	Install the auger assembly correctly according to the operating instructions
Ingredients are stuck in the hopper assembly	Ingredients are too large	Cut ingredients into smaller pieces before adding them to the hopper assembly
Long fibrous ingredients are wrapped around the auger assembly	Ingredient fibers are too long to be cut	Cut ingredients into 5-6 cm or shorter pieces before adding them
The machine stops during operation	Prolonged operation triggered the motor thermal protection	Unplug the unit and allow it to cool for more than 30 minutes before resuming operation
	Too many or overly hard ingredients triggered overload or stall protection	Reverse the machine for 3-5 seconds and reduce the amount of ingredients; do not add overly hard ingredients

- If the problem cannot be resolved, do not disassemble the product yourself. Please send it to the local after-sales service center for repair.
- If the above content differs from the actual product due to model or component changes, the actual product shall prevail without prior notice.

Product Specifications & Packing List

Product Dimensions (L×W×H)	215 mm × 195 mm × 450 mm	
Net Weight	Approx. 3.6 kg	
Technical Specifications	Rated voltage	220-240V
	Rated frequency	50-60Hz
	Rated power	120W
	Recommended continuous operation time	≤10minutes
Packing List	Interval time	≥15minutes
	Juicer (Slow Juicer)	1
	Instruction Manual	1
	Juice Container + Pulp Container	1
	Experience Card	1

Note 1: This product is a Class II appliance and does not require an external grounding device.

Note 2: Some parameters of this product may change without prior notice. We apologize for any inconvenience caused.

After-Sales Service

1. Warranty Regulations

- The product is covered by a 2-year warranty valid nationwide.

2. Warranty Period Definition

- The start date is based on a valid purchase voucher (invoice, online record, etc.).
- If no voucher exists, the start date is 3 months after the product barcode date.

3. Exclusions from Free Warranty Service

The following cases are not covered under the free warranty:

- Damage caused by force majeure events.
- Damage caused by human factors (improper moving, use, maintenance, or storage).
- Damage caused by installation or repair at non-authorized service points (including self-disassembly or repair).
- Products used for non-household purposes (business, commercial, or collective use).
- Failure to provide a valid purchase voucher or the warranty has expired.

4. After-Sales Service Contact Information

- Singapore [E-commerce]: aftersales-sg@joyoung.com
- Malaysia [E-commerce]: aftersales-my@joyoung.com
- Thailand [E-commerce]: aftersales-th@joyoung.com

ข้อควรระวังเพื่อความปลอดภัย



คำเตือน

แสดงถึงข้อควรระวังด้านความปลอดภัยที่อาจทำให้เกิดการเสียชีวิตหรือการบาดเจ็บสาหัส



ข้อควรระวัง

แสดงถึงข้อควรระวังด้านความปลอดภัยที่อาจทำให้เกิดการบาดเจ็บเล็กน้อยหรือความเสียหายต่อทรัพย์สิน



คำเตือน

1. ควรใช้งานเครื่องใช้ไฟฟ้าโดยให้ฝ่าปอดอยู่ในตำแหน่งที่ถูกต้องตามที่ระบุไว้ในคู่มือฉบับนี้เสมอ ห้ามสอดมือหรืออุปกรณ์ใด ๆ เข้าไปในช่องป้อนวัตถุติดเมื่อวางเครื่องไว้บนฐานเครื่อง หากจำเป็นให้ใช้แท่งดันวัตถุติดที่หามาพร้อมเครื่องเพื่อดันวัตถุติดลงในช่องป้อนวัตถุติด
2. การใช้งานเครื่องอย่างไม่ถูกต้อง (เช่น ใช้ชิ้นส่วนที่ไม่ใช่ของแท้ การแปรรูปวัตถุติดที่แข็งมาก เช่น อ้อยหรือก้อนน้ำแข็ง) หรือการใช้งานขณะที่ชิ้นส่วนชำรุดเสียหาย) อาจทำให้เกิดไฟไหม้ ไฟฟ้าช็อต หรือการบาดเจ็บต่อร่างกาย โปรดปฏิบัติตามข้อควรระวังด้านความปลอดภัยและคำแนะนำในการใช้งานอย่างเคร่งครัด
3. ถอดปลั๊กไฟของเครื่องออกจากแหล่งจ่ายไฟทุกครั้งเมื่อปล่อยเครื่องไว้โดยไม่มีผู้ดูแล และก่อนการประกอบ การถอดชิ้นส่วน หรือการทำความสะอาดเครื่อง
4. เลี่ยงต่อการถูกบาด! โปรดใช้ความระมัดระวังอย่างยิ่งเมื่อจับต้องชิ้นส่วนที่มีความคม (เช่น ขูดเกลียวสก็ด) ขณะเทกากออกจากภาชนะกาก และขณะทำความสะอาด
5. หลีกเลี่ยงการทกของของเหลวลงบนหัวต่อไฟฟ้าเพื่อป้องกันไฟฟ้าช็อตหรือไฟฟ้าลัดวงจร
6. ห้ามล้าง หรือฉีดพ่นน้ำหรือของเหลวอื่น ๆ ลงบนตัวเครื่องหลัก เนื่องจากอาจทำให้ชิ้นส่วนเสียหายหรือเกิดกระแสไฟฟ้าวัดได้
7. ห้ามสอดมือ ตะเกียบ หรือวัตถุคมอื่น ๆ เข้าไปในช่องป้อนวัตถุติดหรือช่องทางออกน้ำผลไม้ เพื่อป้องกันการบาดเจ็บหรือความเสียหายต่อผลิตภัณฑ์
8. ห้ามเชื่อมต่อผลิตภัณฑ์เข้ากับแหล่งจ่ายไฟผ่านหัวหลอดไฟที่ไม่ได้รับ
9. ห้ามใช้ผลิตภัณฑ์ใกล้วัสดุไวไฟหรือวัตถุระเบิด หรือในสภาพแวดล้อมที่คล้ายกัน
10. ห้ามถอดแยก ตัดแปลงสายไฟภายใน ชิ้นส่วน หรืออุปกรณ์ป้องกันของผลิตภัณฑ์โดยไม่ได้รับอนุญาต



ข้อควรระวัง

1. เครื่องใช้ไฟฟ้านี้มีไว้สำหรับการใช้งานภายในครัวเรือนและการทำงานในลักษณะใกล้เคียงกัน รวมถึง:
 - พื้นที่ครัวสำหรับพนักงานในร้านค้า สำนักงาน และสถานที่ทำงานอื่น ๆ
 - บ้านพักในฟาร์ม
 - การใช้งานโดยลูกค้าในโรงแรม โมเทล และสถานที่พักอาศัยประเภทอื่น
 - ที่พักประเภทเบแคมป์หรือปราสาท
2. เพื่อเพิ่มความมั่นใจในความปลอดภัยของอาหาร โปรดทำความสะอาดพื้นผิวทั้งหมดที่สัมผัสกับอาหารอย่างทั่วถึงหลังการใช้งานแต่ละครั้ง (เช่น ตัวกรองน้ำผลไม้ ขูดเกลียวสก็ด และภาชนะใส่ผลไม้/ภาชนะกาก) ล้างด้วยน้ำสะอาด ห้ามใช้สารทำความสะอาดที่มีฤทธิ์กัดกร่อนหรือฟอสฟอรัส ตรวจสอบให้แน่ใจว่าชิ้นส่วนทั้งหมดแห้งสนิทก่อนประกอบกลับหรือจัดเก็บ
3. ก่อนใช้งาน โปรดตรวจสอบให้แน่ใจว่าแรงดันไฟฟ้าตรงกับข้อกำหนดของผลิตภัณฑ์ (220-240V/50-60Hz) เพื่อหลีกเลี่ยงอันตรายด้านความปลอดภัยและความเสียหายต่อผลิตภัณฑ์
4. ผลิตภัณฑ์นี้ไม่ได้ออกแบบมาเพื่อให้บุคคลที่มีความสามารถทางร่างกาย การรับรู้ หรือสติปัญญาลดลง หรือผู้ที่ขาดประสบการณ์และความรู้ (รวมถึงเด็ก) ใช้งาน เว้นแต่จะอยู่ภายใต้การดูแลหรือได้รับคำแนะนำจากบุคคลที่รับผิดชอบด้านความปลอดภัยของพวกเขา ควรดูแลเด็กอย่างใกล้ชิดเพื่อให้แน่ใจว่าเด็กจะไม่เล่นกับผลิตภัณฑ์
5. ผลิตภัณฑ์นี้มีไว้สำหรับการใช้งานภายในครัวเรือนเท่านั้น ห้ามนำไปใช้เพื่อวัตถุประสงค์อื่น
6. ผลิตภัณฑ์ที่เหมาะสมสำหรับการใช้งานในพื้นที่ที่มีความสูงไม่เกิน 2,000 เมตรจากระดับน้ำทะเล
7. ตรวจสอบผลิตภัณฑ์ให้ห่างจากแหล่งกำเนิดไฟอย่างน้อย 30 ซม. เพื่อป้องกันความเสียหายต่อผลิตภัณฑ์หรืออันตรายจากไฟไหม้
8. โปรดใช้งานผลิตภัณฑ์ร่วมกับชิ้นส่วนที่เข้าชุดกันเท่านั้น รวมถึงชิ้นส่วนที่หามาพร้อมกับผลิตภัณฑ์และอุปกรณ์เสริมที่บริษัทของเราจำหน่ายแยกต่างหาก การใช้ชิ้นส่วนที่ไม่เข้าชุดกันอาจส่งผลต่อประสิทธิภาพของผลิตภัณฑ์หรือก่อให้เกิดอุบัติเหตุ
9. หากสายไฟชำรุด เพื่อหลีกเลี่ยงอันตราย ต้องให้ผู้ผลิต ศูนย์บริการของผู้ผลิต หรือผู้เชี่ยวชาญที่มีคุณสมบัติเหมาะสมเป็นผู้ทำการเปลี่ยน
10. ระหว่างการใช้งาน ให้เสียบปลั๊กไฟเข้ากับเต้ารับที่แน่นและสุด เพื่อให้มีการสัมผัสทางไฟฟ้าที่ดี การเสียบปลั๊กไม่สุดอาจทำให้เกิดไฟฟ้าช็อตหรือความร้อนสูงเกินไป ซึ่งอาจนำไปสู่การเกิดไฟไหม้
11. ห้ามใช้ตัวนำไฟฟ้าธรรมดาหรือฟิวส์ที่มีค่ากระแสแลเกินกว่าค่าที่กำหนดตามแท่นพิวส์ของเครื่องใช้ไฟฟ้าหรือแหล่งจ่ายไฟภายในบ้าน
12. ก่อนทำการเปลี่ยนชิ้นส่วนหรือสัมผัสชิ้นส่วนที่กำลังเคลื่อนที่ ให้ปิดสวิตช์และถอดปลั๊กไฟออกจากแหล่งจ่ายไฟก่อน

13. ก่อนถอดประกอบ ประกอบ ปรับตั้ง หรือทำความสะอาดชิ้นส่วนใด ๆ ของผลิตภัณฑ์ ให้ปิดสวิตช์และถอดปลั๊กไฟออกจากแหล่งจ่ายไฟก่อน เพื่อป้องกันกระแสไฟฟ้ารั่วหรือการสสารที่เครื่องโดยไม่ตั้งใจ
14. ก่อน ระหว่าง หรือหลังการใช้งาน หากพบความเสียหายหรือรอยแตกร้าวที่ชัดเจนบนตัวเครื่องหลัก ชุดไดนาโม ผลไม้ ตะแกรงสกัด ชุดเกลียวสกัด หรือชุดกรวยป้อนวัตถุดิบ ให้หยุดใช้ผลิตภัณฑ์ทันทีเพื่อหลีกเลี่ยงการบาดเจ็บ หลังการแปรรูปเสร็จสิ้น ให้ปิดสวิตช์ ถอดปลั๊กไฟออกจากแหล่งจ่ายไฟ และรอให้มอเตอร์และชุดเกลียวสกัดหยุดทำงานอย่างสมบูรณ์ก่อนถอดชิ้นส่วนที่สามารถถอดได้และทำความสะอาดผลิตภัณฑ์โดยทันที ทำความสะอาดชิ้นส่วนที่สัมผัสกับอาหารด้วยน้ำสะอาด ชะลอและทำความสะอาดชิ้นส่วนที่สามารถถอดได้ โปรดดำเนินการด้วยความระมัดระวังเพื่อหลีกเลี่ยงการบาดเจ็บ (แนะนำให้สวมถุงมือป้องกัน)
15. ห้ามเสียบหรือถอดปลั๊กไฟด้วยมือเปียก เพื่อป้องกันไฟฟ้าช็อต ห้ามให้สายไฟสัมผัสกับขอบหรือมุมที่คม เพื่อหลีกเลี่ยงความเสียหายและการรั่วของกระแสไฟฟ้า เมื่อต้องการถอดปลั๊ก ให้จับที่ตัวปลั๊กให้แน่น ห้ามดึงที่สายไฟเพื่อป้องกันความเสียหายต่อสายไฟ
16. หากผลิตภัณฑ์มีเสียงผิดปกติ มีกลิ่นผิดปกติ เกิดความร้อนสูงเกินไป หรือทำงานผิดปกติ ให้หยุดใช้งานทันที ปิดสวิตช์ และถอดปลั๊กไฟออกจากแหล่งจ่ายไฟ
17. ความเร็วในการทำงานของผลิตภัณฑ์นี้ได้ถูกตั้งค่าไว้ที่ระดับที่เหมาะสมที่สุดแล้ว จึงไม่จำเป็นต้องปรับตั้ง
18. เมื่อไม่ได้ใช้งานผลิตภัณฑ์ ให้ปิดสวิตช์และถอดปลั๊กไฟออกจากแหล่งจ่ายไฟ เพื่อป้องกันการลัดวงจร
19. แนะนำให้ใช้งานผลิตภัณฑ์ต่อเนื่องไม่เกิน 10 นาที จากนั้นให้หยุดพักเครื่อง หากต้องการใช้งานต่อ ให้รอระยะเวลาการระบายความร้อน 15 นาที ก่อนสตาร์ทเครื่องอีกครั้ง
20. ห้ามใช้ผลิตภัณฑ์เพื่อวัตถุประสงค์อื่นที่ไม่ได้ระบุไว้ในคู่มือฉบับนี้
21. ระหว่างการใช้งาน ให้วางผลิตภัณฑ์บนพื้นผิวที่มั่นคงและเรียบเสมอ ห้ามใช้งานบนพื้นผิวที่เอียงหรือไม่มั่นคง หรือบนวัสดุที่ติดได้ เช่น พรม ผ้าเช็ดตัว พลาสติก หรือกระดาษ ควรวางผลิตภัณฑ์ให้ห่างจากขอบพื้นผิวเพื่อป้องกันการพลิกคว่ำหรืออุบัติเหตุ
22. ก่อนใช้งาน ให้ตรวจสอบตัวเครื่องหลัก ชุดไดนาโมผลไม้ ตะแกรงสกัด ชุดเกลียวสกัด และชุดกรวยป้อนวัตถุดิบเป็นต้น ว่ามีความเสียหายหรือไม่ หากพบความเสียหาย ให้หยุดใช้งานทันทีและติดต่อฝ่ายบริการลูกค้าของเรา ห้ามถอดแยกหรือซ่อมแซมผลิตภัณฑ์โดยไม่ได้รับอนุญาต เนื่องจากอาจส่งผลกระทบต่อประสิทธิภาพของผลิตภัณฑ์หรือก่อให้เกิดอุบัติเหตุ
23. เมื่อเคลื่อนย้ายผลิตภัณฑ์ ให้ใช้มือทั้งสองข้างจับที่ด้านล่างของตัวเครื่อง เพื่อป้องกันไม่ให้ตัวเครื่องหลักหล่น ซึ่งอาจทำให้เกิดการบาดเจ็บหรือความเสียหายต่อผลิตภัณฑ์
24. ก่อนเชื่อมต่อแหล่งจ่ายไฟ ให้ตรวจสอบว่าสวิตช์อยู่ในตำแหน่ง OFF และชิ้นส่วนที่สามารถถอดได้ทั้งหมดได้รับการติดตั้งอย่างถูกต้องแล้ว เพื่อหลีกเลี่ยงความขัดข้องของแหล่งจ่ายไฟหรือการบาดเจ็บ


25. ห้ามเคลื่อนย้ายผลิตภัณฑ์หรือสัมผัสชิ้นส่วนที่กำลังเคลื่อนที่ เช่น ชุดเกลียวสกัดและมอเตอร์ ขณะผลิตภัณฑ์ยังเชื่อมต่อกับแหล่งจ่ายไฟ เพื่อป้องกันการบาดเจ็บหรือความเสียหายต่อผลิตภัณฑ์
26. ระหว่างการทำงาน ห้ามนำดวงตาเข้าไปใกล้ช่องป้อนวัตถุดิบ เพื่อป้องกันการบาดเจ็บ
27. การเกิดคราบสับชิ้นส่วนหลังจากแปรรูปวัตถุดิบบางชนิดถือเป็นเรื่องปกติ และไม่ส่งผลกระทบต่อการใช้งานของผลิตภัณฑ์
28. ห้ามทำความสะอาดหรือฆ่าเชื้อชิ้นส่วนใด ๆ ของผลิตภัณฑ์ในเครื่องล้างจาน เตาไมโครเวฟ ตู้แช่แข็ง หรือใช้น้ำร้อนที่มีอุณหภูมิเกิน 60°C ห้ามให้ความร้อนแก่ชิ้นส่วนด้วยอุปกรณ์อื่น เพื่อหลีกเลี่ยงการเสียรูปหรือความเสียหาย
29. ห้ามแปรรูปวัตถุดิบที่มีอุณหภูมิเกิน 60°C เพื่อป้องกันการเสียหายต่อชิ้นส่วนหรือการลวกจากความร้อน
30. ห้ามถอดแยก บีบอัด ทำให้เสียหาย หรือทำให้เกิดการลัดวงจรของผลิตภัณฑ์โดยพลการ ห้ามนำผลิตภัณฑ์ไปแช่น้ำหรือใส่ในกองไฟ เพื่อหลีกเลี่ยงความเสี่ยงจากไฟไหม้
31. ห้ามวางผลิตภัณฑ์ในสภาพแวดล้อมที่มีอุณหภูมิสูงหรือมีสนามแม่เหล็กแรงสูง เพื่อป้องกันการทำงานผิดปกติหรืออันตรายจากไฟไหม้
32. เมื่อต้องการทิ้งผลิตภัณฑ์หรือบรรจุภัณฑ์ของผลิตภัณฑ์ ให้ส่งมอบให้กับหน่วยงานรีไซเคิลที่มีคุณสมบัติเหมาะสม และให้ตัดสายไฟก่อนการกำจัด
33. คำแนะนำเกี่ยวกับวัตถุดิบ:
 - 1) ผลไม้ที่ไม่มีโปรตีนหรือไขมันสูง (เช่น ทุเรียน ขนุน ไข่เคียว) ไม่เหมาะสำหรับการคั้นเพียงอย่างเดียว ควรใช้ร่วมกับผลไม้ที่มีไขมันมาก เช่น ลูกแพร์
 - 2) นำหลุม เมล็ดแข็ง หรือเปลือกหนาของผลไม้ เช่น พีช พลัม แอปเปิ้ล มะม่วง พลัม มะกอก ฯลฯ ออกก่อนนำไปแปรรูป เพื่อป้องกันไม่ให้ผลิตภัณฑ์เสียหาย
 - 3) เนื่องจากมะนาวมีความเป็นกรดสูง ปริมาณน้ำมะนาวต่อการคั้นหนึ่งครั้งควรจำกัดไม่เกิน 20 กรัม (ประมาณมะนาวหนึ่งบาง 3 ชิ้น) และควรผสมรวมกับผลไม้หรือผักชนิดอื่น
 - 4) วัตถุดิบที่มีเส้นใยมากหรือมีความแข็ง (เช่น แครอท เซเลอรี่ ชิง) ควรหั่นเป็นชิ้นก่อนนำไปคั้น ระหว่างการใช้งาน ควรทำความสะอาดช่องทางออกกากด้วยตนเองเป็นระยะ เพื่อให้การทำงานราบรื่น และหลังจากคั้นวัตถุดิบที่มีเส้นใยรวม ๆ 1 กก. ควรล้างชิ้นส่วนสำหรับการคั้นน้ำผลไม้
 - 5) วัตถุดิบประเภทใบหรือก้าน (เช่น เซเลอรี่ เกล) ควรหั่นเป็นท่อนยาวประมาณ 5-6 ซม. เส้นใยอาจพันรอบชุดสกรูได้ ระหว่างการใช้งานควรทำความสะอาดช่องทางออกกากด้วยตนเอง เพื่อเพิ่มประสิทธิภาพการทำงาน of เครื่องสกรุน้ำผลไม้
 - 6) น้ำแอปเปิ้ลที่คั้นสดใหม่อาจเกิดการออกซิเดชันและเปลี่ยนสี ซึ่งถือเป็นเรื่องปกติ การเติมน้ำมะนาวสองสามหยดสามารถช่วยชะลอกระบวนการออกซิเดชันได้

- 7) วัตถุดิบที่มีเนื้อมากและมีเนื้อสัมผัสนุ่ม (เช่น มะเขือเทศ กีวี) จะให้ปริมาณน้ำคั้นค่อนข้างน้อย แนะนำให้คั้นร่วมกับวัตถุดิบที่แข็งกว่าและมีน้ำมาก (เช่น ลูกแพร์) โดยให้คั้นวัตถุดิบที่นุ่มก่อน แล้วจึงตามด้วยวัตถุดิบที่แข็งกว่า
- 9) เนื่องจากความแตกต่างของฤดูกาลและแหล่งที่มาของวัตถุดิบ ปริมาณน้ำคั้นและรสชาติอาจแตกต่างกันเล็กน้อย
- 10) ผลไม้ตระกูลเบอร์รี่และผลไม้แข็งสามารถใช้ทำไอศกรีมได้ เช่น กล้วย มะม่วง แก้วมังกร บลูเบอร์รี่ และสตอร์เบอร์รี่ ก่อนนำไปแปรรูป ควรหั่นวัตถุดิบเป็นลูกเต๋าประมาณ 3×3 ซม. และแช่แข็งอย่างน้อย 6 ชั่วโมง ป้อนวัตถุดิบครั้งละปริมาณเล็กน้อย (แนะนำ: ครั้งละ 6–8 ชิ้น) การใส่วัตถุดิบมากเกินไปหรือชิ้นที่มีขนาดใหญ่เกินไปอาจทำให้มอเตอร์ติดขัดและหยุดทำงาน
- 11) ห้ามใช้เครื่องสกัดน้ำผลไม้ชิ้นนี้อ้อย ก่อนน้ำแข็ง หรือวัตถุดิบที่แข็งมากอื่น ๆ โดยเด็ดขาด
- 12) ผลไม้ทรงกลมทั้งผล (เช่น ส้ม แอปเปิล) อาจป้อนเข้าสู่เครื่องได้ไม่ราบรื่นเนื่องจากลักษณะรูปทรง หากเกิดการติดขัด ให้ใช้แท่งดันอาหารช่วยดัน หรือหันเป็นชิ้นก่อนใช้งาน

เรียน ลูกค้า


ขอขอบคุณที่เลือกใช้เครื่องสกัดน้ำผลไม้ Joyoung (เครื่องสกัดน้ำผลไม้แบบรอบต่ำ) คู่มือการใช้งานฉบับนี้ใช้สำหรับรุ่น SJ-Z585-MS01 และ SJ-Z585-TH01 เนื้อหาทั้งหมดในคู่มือฉบับนี้มีไว้เพื่อเป็นข้อมูลอ้างอิงสำหรับการใช้งานและการบำรุงรักษามลิตภัณฑ์เท่านั้น หากมีประเด็นใดที่ยังไม่ได้กล่าวถึง โปรดติดต่อฝ่ายบริการลูกค้าของเรา

เราหวังว่าผลิตภัณฑ์ของ Joyoung จะนำความอบอุ่น ความสะดวกสบาย และสุขภาพที่ดีมาสู่วิถีชีวิตของคุณ

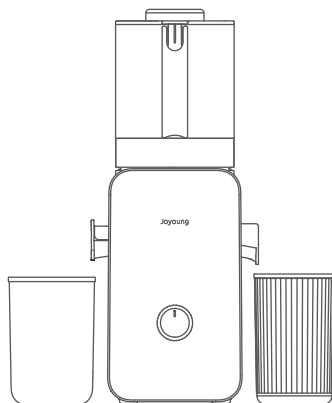


สารบัญ

ชื่อและหน้าที่ของชิ้นส่วน -----	16	ข้อมูลพื้นฐานของผลิตภัณฑ์และรายการอุปกรณ์ภายในบรรจุภัณฑ์ -----	19
คำแนะนำการใช้งาน -----	17	บริการหลังการขาย -----	20
การทำความสะอาดและการบำรุงรักษา -----	18		
แผนผังวงจรไฟฟ้า -----	18		
การวิเคราะห์ข้อขัดข้องและการแก้ไขปัญหา -----	19		

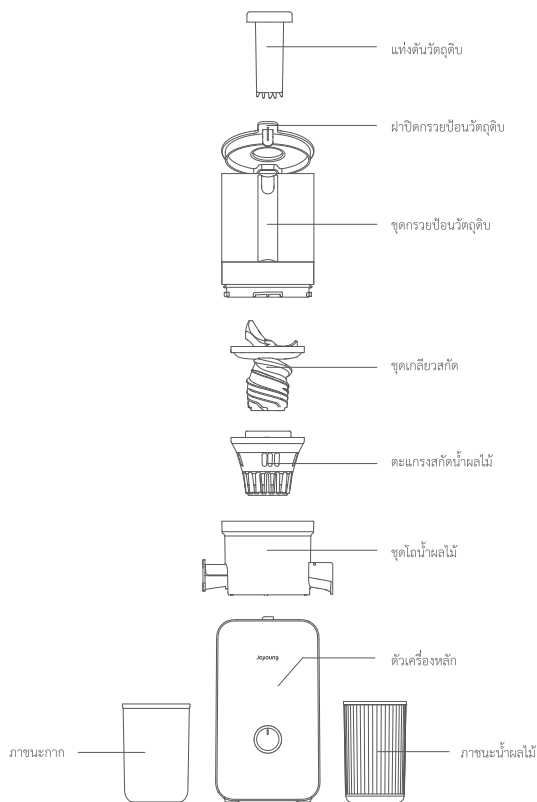

หมายเหตุ: โปรดอ้างอิงรูปภาพผลิตภัณฑ์จากผลิตภัณฑ์จริงภายในบรรจุภัณฑ์!

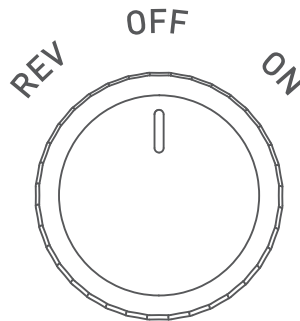

ON: หมุนปุ่มไปที่ตำแหน่ง ON เครื่องจะทำงานตามปกติสำหรับการสกัดน้ำผลไม้ และวงแหวนไฟจะแสดงแสงสีขาวค้าง

OFF: เมื่อสวิตช์อยู่ที่ตำแหน่งตรงกลาง (OFF) ผลิตภัณฑ์จะหยุดทำงาน และวงแหวนไฟจะกะพริบแสงสีขาวเป็นเวลา 5 นาที ก่อนดับลง

REV: กดปุ่มค้างไว้ที่ตำแหน่ง REV เครื่องจะทำงานในทิศทางย้อนกลับ และวงแหวนไฟจะแสดงแสงสีส้มค้าง ฟังก์ชันนี้ใช้สำหรับแก้ไขการติดขัดของวัตถุดิบ หรือช่วยในการถอดประกอบและประกอบชุดสกัดน้ำผลไม้


หมายเหตุ:

- ห้ามเดินเครื่องเปล่าโดยไม่ใส่วัตถุดิบ
- ก่อนสกัดน้ำผลไม้ ให้ปิดช่องกากของชุดไดรฟ์ผลไม้ หากปิดไม่สนิท อาจมีของเหลวปริมาณเล็กน้อยรั่วออกจากช่องกาก
- หากวัตถุดิบติดขัดระหว่างการสกัดน้ำผลไม้ ให้ใช้แท่งตัดวัตถุดิบที่เข้าชุดกันกดและหมุนวัตถุดิบอย่างเบา ๆ เพื่อช่วยในการตัด หรืออีกวิธีหนึ่งคือให้เดินเครื่องในโหมดย้อนกลับประมาณ 5-10 วินาที จากนั้นสลับกลับไปตำแหน่งสกัดน้ำผลไม้เพื่อใช้งานต่อ
- ปริมาณวัตถุดิบที่น้อยอาจทำให้มีกากน้อยมากหรือไม่มีความเลย ซึ่งเป็นเรื่องปกติและไม่ส่งผลต่อการใช้งาน
- ห้ามเปิดฝาช่องน้ำผลไม้เป็นเวลานานระหว่างการสกัดน้ำผลไม้ เนื่องจากน้ำผลไม้อาจไหลย้อนกลับเข้าไปในกรวยป้อนวัตถุดิบ
- สำหรับการสกัดน้ำผลไม้แบบผสม ให้ใส่วัตถุดิบที่นุ่ม (เช่น ส้ม) ก่อน จากนั้นจึงใส่วัตถุดิบที่แข็ง (เช่น แครอท) เพื่อให้ได้น้ำผลไม้ที่มีเนื้อสัมผัสดีขึ้น
- เมื่อสกัดวัตถุดิบที่แข็ง (เช่น แครอท) ควรหันเป็นชิ้นก่อนใส่ลงในช่องป้อนวัตถุดิบ เพื่อหลีกเลี่ยงการติดขัด
- หลังการสกัดน้ำผลไม้ ให้ปิดฝาช่องน้ำผลไม้ก่อนนำถ้วยน้ำผลไม้ ออก เพื่อป้องกันไม่ให้น้ำผลไม้ที่ตกค้างหยดออกมา


คำแนะนำการใช้งานผลิตภัณฑ์

ก่อนใช้งานผลิตภัณฑ์เป็นครั้งแรก โปรดทำความสะอาดชิ้นส่วนทั้งหมดที่สัมผัสกับอาหารให้เรียบร้อย


คู่มือการใช้งาน

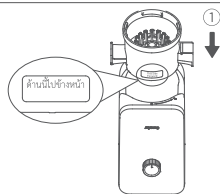


ติดตั้งชุดโถน้ำผลไม้เข้ากับตัวเครื่องหลัก โดยตรวจสอบให้แน่ใจว่าสติกเกอร์ "ด้านนี้ไปข้างหน้า This Side Forward" หันไปทางแผงด้านหน้า




ติดตั้งตะแกรงสกัดน้ำผลไม้ลงในชุดโถน้ำผลไม้

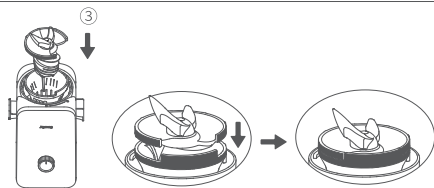

ติดตั้งชุดเก็ยสีกัด: จัดตำแหน่งร่องบนแผ่นกดของชุดเก็ยสีกัดให้ตรงกับส่วนยื่นของตะแกรงสกัดน้ำผลไม้ จากนั้นหมุนใบมีดตัดด้านบนเล็กน้อยจนอยู่ในระดับเสมอกับแผ่นกดและตะแกรงสกัดน้ำผลไม้

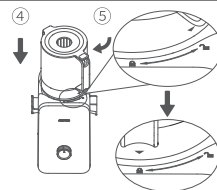

ติดตั้งชุดกรวยป้อนวัตถุดิบ: จัดตำแหน่งสัญลักษณ์จัดแนวนบนกรวยป้อนวัตถุดิบ "▼" ให้ตรงกับตำแหน่งปลดล็อก "🔒" บนตัวเครื่องหลัก จากนั้นวางลงในชุดโถน้ำผลไม้ แล้วหมุนตามเข็มนาฬิกาจนกระทั่งสัญลักษณ์จัดแนวนบนกรวยป้อนวัตถุดิบ "▼" ตรงกันอย่างสมบูรณ์ 🔒

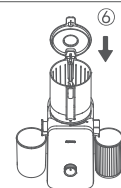

ใส่วัตถุดิบและปิดฝาเพื่อเริ่มการทำงาน

หลังจากทำความสะอาดแล้ว ให้นำผลไม้และผักใส่ลงในกรวยป้อนวัตถุดิบ ปิดฝาปิดกรวยป้อนวัตถุดิบ จากนั้นเปิดเครื่องเพื่อทำน้ำผลไม้สด

6. ผลิตภัณฑ์นี้รองรับวิธีการป้อนวัตถุดิบ 2 วิธี ดังนี้


วิธีที่ 1: เปิดฝาปิดกรวยป้อนวัตถุดิบ หันวัตถุดิบขนาดใหญ่หรือมีเส้นใย (เช่น ขึ้นฉ่าย) เป็นท่อนยาวประมาณ 5-6 ซม. หรือสั้นกว่า จากนั้นใส่ลงในกรวยป้อนวัตถุดิบ ปิดฝาปิดกรวยป้อนวัตถุดิบ แล้วเริ่มสกัดน้ำผลไม้

วิธีที่ 2: วัตถุดิบที่ยาวหรือมีขนาดเล็กสามารถใส่ผ่านช่องเปิดขนาดเล็กบนฝาแบบเปิดปิดได้โดยตรง

หมายเหตุ: เพื่อความปลอดภัย หากเปิดฝาปิดกรวยป้อนวัตถุดิบระหว่างการทำงาน ผลิตภัณฑ์จะหยุดทำงาน และจะกลับมาทำงานอีกครั้งเมื่อปิดฝาปิดกรวยป้อนวัตถุดิบเรียบร้อยแล้ว


การทำความสะอาดและการบำรุงรักษา

1. หลังการใช้งาน ให้ถอดปลั๊กไฟออกจากแหล่งจ่ายไฟ และถอดชิ้นส่วนที่สามารถถอดได้ออกโดยทันที
2. ใช้ผ้าชุบน้ำบิดหมาดเช็ดทำความสะอาดตัวเครื่องหลัก สำหรับอุปกรณ์เสริมที่สามารถถอดได้อื่น ๆ (เช่น ชุดโถน้ำผลไม้ ตะแกรงสกัด ชุดเกลียวสกัด ชุดกรวยบดวัตถุดิบ แท่งดันวัตถุดิบ เป็นต้น) ให้ทำความสะอาดด้วยน้ำสะอาด จากนั้นเช็ดหรือผึ่งให้ชิ้นส่วนทั้งหมดแห้งสนิทก่อนจัดเก็บ
หมายเหตุ: เมื่อทำความสะอาดชุดโถน้ำผลไม้ ให้เปิดช่องกากเพื่อทำความสะอาดได้สะดวกยิ่งขึ้น
3. ห้ามทำความสะอาดผลิตภัณฑ์ด้วยฝอยขัดโลหะ สารทำความสะอาดที่มีฤทธิ์กัดกร่อน หรือของเหลวที่มีฤทธิ์กัดกร่อน (เช่น เบนซิน อะซิโตน)
4. หากไม่ได้ใช้งานผลิตภัณฑ์เป็นเวลานาน ให้ทำความสะอาดและเช็ดให้แห้ง จากนั้นเก็บรักษาไว้ในสถานที่ที่แห้ง มีการระบายอากาศดี และหลีกเลี่ยงแสงแดดโดยตรง
5. ขั้นตอนการถอดประกอบและทำความสะอาดชิ้นส่วนที่สัมผัสกับอาหาร:




1

ถอดชุดสกัดน้ำผลไม้ออกจากตัวเครื่องหลัก

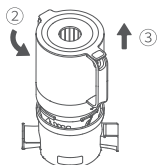


2

หมุนคลายชุดกรวยบดวัตถุดิบทวนเข็มนาฬิกาแล้วถอดออก

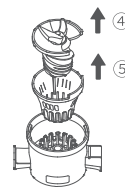

3


นำชุดเกลียวสกัดและตะแกรงสกัดออกแยกจากกัน

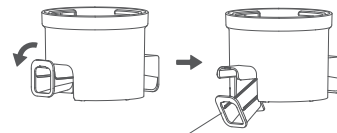

4

เพื่อทำความสะอาดถาดรวบรวมน้ำผลไม้อย่างทั่วถึง ให้เปิดช่องกาก

แผนผังวงจรไฟฟ้า

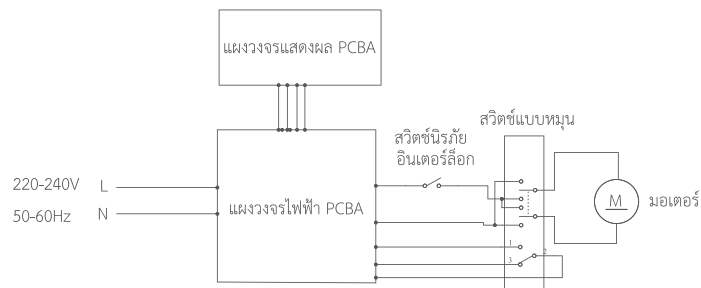

การวิเคราะห์ข้อขัดข้องและการแก้ไขปัญหา

อาการขัดข้อง	การวิเคราะห์สาเหตุ	แนวทางการแก้ไขปัญหา
ผลิตภัณฑ์ไม่ทำงานหลังจากเชื่อมต่อแหล่งจ่ายไฟ	เสียบปลั๊กไฟไม่แน่นหรือเสียบไม่ถูกต้อง	เสียบปลั๊กไฟให้แน่น
	ชุดกรวยป้อนวัตถุดิบติดตั้งไม่ถูกต้อง	ติดตั้งชุดกรวยป้อนวัตถุดิบให้ถูกต้องและปิดฝาปิดกรวยป้อนวัตถุดิบ
มีกากในน้ำผลไม้มากเกินไป	ตะแกรงสกัดน้ำผลไม้ชำรุด	โปรดส่งผลิตภัณฑ์ไปยังศูนย์บริการ Joyoung ที่ใกล้ที่สุดเพื่อตรวจสอบ
การสั่นสะเทือนผิดปกติหรือมีเสียงดังผิดปกติ	ตะแกรงสกัดน้ำผลไม้ชำรุด	โปรดส่งผลิตภัณฑ์ไปยังศูนย์บริการ Joyoung ที่ใกล้ที่สุดเพื่อตรวจสอบ
	มอเตอร์ชำรุด	โปรดส่งผลิตภัณฑ์ไปยังศูนย์บริการ Joyoung ที่ใกล้ที่สุดเพื่อตรวจสอบ
มีน้ำผลไม้หรือกากร่วงลงบนตัวเครื่องหลังการสกัดน้ำผลไม้	ไม่ได้ปิดช่องกากของชุดโถน้ำผลีก่อนการสกัดน้ำผลไม้	ปิดช่องกากก่อนการสกัดน้ำผลไม้
ไม่สามารถติดตั้งชุดกรวยป้อนวัตถุดิบได้อย่างถูกต้อง	ชุดเกลียวสกรูติดตั้งไม่ถูกต้อง	ติดตั้งชุดเกลียวสกรูให้ถูกต้องตามคำแนะนำการใช้งาน
วัตถุดิบติดอยู่ในชุดกรวยป้อนวัตถุดิบ	วัตถุดิบมีขนาดใหญ่เกินไป	หั่นวัตถุดิบให้มีขนาดเล็กลงก่อนใส่ลงในชุดกรวยป้อนวัตถุดิบ
วัตถุดิบที่มีเส้นใยยาวพันรอบชุดเกลียวสกรู	เส้นใยของวัตถุดิบยาวเกินไปจนไม่สามารถตัดได้	หั่นวัตถุดิบให้เป็นชิ้นยาว 5-6 ซม. หรือสั้นกว่านั้นก่อนใส่ลงไปได้
เครื่องหยุดทำงานระหว่างการใช้งาน	การทำงานต่อเนื่องเป็นเวลานานทำให้ระบบป้องกันความร้อนของมอเตอร์ทำงาน	ถอดปลั๊กไฟออกและปล่อยให้เครื่องเย็นลงมากกว่า 30 นาที ก่อนเริ่มใช้งานอีกครั้ง
	วัตถุดิบมากเกินไปหรือแข็งเกินไปทำให้ระบบป้องกันโอเวอร์โหลดหรือการติดขัดทำงาน	ให้เดินเครื่องในโหมดย้อนกลับเป็นเวลา 3-5 วินาที และลดปริมาณวัตถุดิบ ห้ามใส่วัตถุดิบที่แข็งเกินไป

- หากไม่สามารถแก้ไขปัญหาได้ ห้ามถอดแยกผลิตภัณฑ์ด้วยตนเอง โปรดส่งผลิตภัณฑ์ไปยังศูนย์บริการหลังการขายในพื้นที่เพื่อทำการซ่อมแซม สำหรับรายละเอียด โปรดดูส่วนบริการหลังการขายในคู่มือฉบับนี้
- หากเนื้อหาข้างต้นแตกต่างจากผลิตภัณฑ์จริงเนื่องจากการเปลี่ยนแปลงของรุ่นหรือชิ้นส่วน ให้ยึดตามผลิตภัณฑ์จริงเป็นหลัก โดยอาจมีการเปลี่ยนแปลงโดยไม่ต้องแจ้งให้ทราบล่วงหน้า

ข้อมูลจำเพาะของผลิตภัณฑ์และรายการอุปกรณ์ภายในบรรจุภัณฑ์

ขนาดผลิตภัณฑ์ (ยาว × กว้าง × สูง)	215 mm × 195 mm × 450 mm	
น้ำหนักสุทธิ	ประมาณ 3.6 kg	
ข้อมูลจำเพาะทางเทคนิค	แรงดันไฟฟ้าพิกัด	220-240V
	ความถี่พิกัด	50-60Hz
	กำลังไฟฟ้าพิกัด	120W
	ระยะเวลาการทำงานต่อเนื่องที่แนะนำ	≤10minutes
รายการอุปกรณ์ภายในบรรจุภัณฑ์	ระยะเวลาหยุดพัก	≥15minutes
	เครื่องสกัดน้ำผลไม้ (เครื่องสกัดน้ำผลไม้แบบรอบต่ำ)	1
	คู่มือการใช้งาน	1
	ภาชนะน้ำผลไม้ + ภาชนะกาก	1
	บัตรรับประกันการใช้งาน	1

หมายเหตุ 1: ผลิตภัณฑ์นี้เป็นเครื่องใช้ไฟฟ้าประเภท Class II และไม่จำเป็นต้องใช้อุปกรณ์ต่อสายดินภายนอก

หมายเหตุ 2: พารามิเตอร์บางประการของผลิตภัณฑ์นี้อาจมีการเปลี่ยนแปลงโดยไม่ต้องแจ้งให้ทราบล่วงหน้า ขอภัยในความไม่สะดวกที่อาจเกิดขึ้น

บริการหลังการขาย

1.เงื่อนไขการรับประกัน

- สินค้ารับประกันเป็นระยะเวลา 2 ปี ครอบคลุมทั่วประเทศ

2.การกำหนดระยะเวลาประกัน

- ระยะเวลาประกันเริ่มต้นตามวันที่ระบุในหลักฐานการซื้อที่ถูกต้อง (เช่น ใบกำกับภาษี หรือบันทึกคำสั่งซื้อออนไลน์)
- หากไม่มีหลักฐานการซื้อที่ถูกต้อง ระยะเวลาประกันจะเริ่มนับจาก 3 เดือนหลังจากวันที่ผลิตที่ระบุบนบาร์โค้ดของสินค้า

3.กรณีที่ไม่อยู่ในเงื่อนไขการรับประกันฟรี กรณีดังต่อไปนี้จะไม่ครอบคลุมภายใต้การรับประกันฟรี:

- ความเสียหายที่เกิดจากเหตุสุดวิสัย
- ความเสียหายที่เกิดจากการใช้งาน การเคลื่อนย้าย การบำรุงรักษา หรือการจัดเก็บที่ไม่ถูกต้องโดยผู้ใช้
- ความเสียหายที่เกิดจากการติดตั้งหรือซ่อมแซมโดยศูนย์บริการที่ไม่ได้รับอนุญาต รวมถึงการถอดประกอบหรือซ่อมแซมด้วยตนเอง
- สินค้าที่นำไปใช้ในวัตถุประสงค์ที่ไม่ใช่ภายในครัวเรือน (เช่น เชิงพาณิชย์หรือธุรกิจ)
- ไม่สามารถแสดงหลักฐานการซื้อที่ถูกต้อง หรือสินค้าหมดระยะเวลาประกันแล้ว

4.ช่องทางติดต่อบริการหลังการขาย (อีคอมเมิร์ซ)

- สิงคโปร์: aftersales-sg@joyoung.com
- มาเลเซีย: aftersales-my@joyoung.com
- ไทย: aftersales-th@joyoung.com

